

VISTAMATIC INSTALLATION INSTRUCTIONS

For all Vistamatic Products

Pre-Installation Fitting Check – all Products

1. **DO NOT** lay the unit down flat, always keep in an upright position*
2. On arrival check all panels for damage through shipping; this must be within 7 days of receipt.
3. Make sure the panel is the correct size to the order you have placed.
4. Check to see if any damage or non-acceptable imperfections are on the panel
5. When the panel is standing on the bottom edge (the handle is at the bottom) the panel functions smoothly. **DO NOT** install if the handle mechanism is not functioning correctly.
6. **ALWAYS** carry the unit in an upright position.*

*If instructions are not followed it could affect the warranty

Basic Stops Instructions

Openings/Frames:

1. For all basic stops we recommend the opening to be 1/8" overall larger than the panel as it should not be a tight fit. For all other frames this is dependent on the frame supplied.
2. Make sure the opening is squared.
3. Vistamatic® recommends a 5/8" stop as a minimum (to cover spacers and sealant) on all products.
4. There is 1" clearance from the bottom of the glass to the bottom of the handle.

Installation Instructions

1. For basic stops fix one side of the opening. This can be achieved by screwing/nailing or silicone whichever is suitable for the project. Fit intumescent material if required for fire rated door or any other glazing tape you see fit (our products do not require tape).
2. Place the panel into the opening if required use packing wedges to make sure that panel is sitting square in the aperture.
3. Fix the hardwood fixing beads to the reverse side of the aperture as described in step 1. Fix the fixing beads top and bottom first and check that the Vistamatic Vision Panel is functioning correctly, and the fixing beads are not too tight. It is **VERY IMPORTANT** that you **DO NOT** pinch the panel, as this will stop the Vistamatic Vision Panel from functioning and will void the warranty. When you are sure that all is correct fit the side fixing beads in the same way.

VISTAMATIC INSTALLATION INSTRUCTIONS

Basic Instructions for a HMF/Borrowed Light Supplied by Privacy Glass Solutions

For Hollow Metal/Borrowed Light Frames supplied by a different manufacturer, please refer to their installation instructions as they will vary.

Pre-Installation Fitting Check – all Products

1. **DO NOT** lay the unit down, always keep in an upright position*
2. On arrival check all panels for damage through shipping; this must be within 7 days of receipt.
3. Make sure the panel is the correct size to the order you have placed.
4. Check to see if any damage or non-acceptable imperfections are on the panel
5. When the panel is standing on the bottom edge (the handle is at the bottom) the panel functions smoothly. **DO NOT** install if the handle mechanism is not functioning correctly.
6. **ALWAYS** carry the unit in an upright position.*

*If instructions are not followed it could affect the warranty

Basic Installation Instructions

Openings/Frames

1. For our frames we recommend the opening to be 1" overall larger than the panel ordered. For all other frames this is dependent on the frame supplied.
2. There is 1" clearance from the bottom of the glass to the bottom of the Handle
3. Make sure the opening is squared

Installation Instructions

1. Push the frame into one side of the opening (none screws side). Fit intumescent material if required for fire rated door or glazing tape if your wish.
2. Carefully place the Vistamatic Vision Panel into the opening
3. Fit other side of the frame to the other side and then fix screws top and bottom first and check that the Vistamatic Vision Panel is functioning correctly making sure these are not too tight. It is **VERY IMPORTANT** that you **DO NOT** pinch the panel, as this will stop the Vistamatic Vision Panel from functioning and will void the warranty. When you are sure that all is correct fit the side screws in the same way and check again.

Note: Sizing a Vistamatic Vision Panel is very easy; it is like any normal piece of glass that you would place into a frame, just a little thicker. Standard units are 11/16" thick – please check thickness of your units before ordering frames.

The best framing solution is to purchase HMF through us, that way we only need the opening size!